

NORPASS3 INSTALLATION WIZARD

“Well, that’s the equipment installed
- now comes the ~~difficult~~ easy part”

There aren’t many installers that look forward to configuring an access control installation. Setting card formats, access rights, door strike times, etc. can be laborious (and sometimes confusing).

Wouldn’t it be great if you could just fly through the process using a simple to follow questionnaire with guidance to help you choose the right settings. You would be able to avoid inconveniences such as forgetting to configure a setting that shows up as a problem later while you’re testing a reader at the far end of the building – or even worse, your customer discovers it after you have left the premises.


The Norpass3 Wizard does just that. Here’s how it helps you to completely configure a new installation in just a few minutes:



Wizard Features

- ▶ Takes you through each stage of the configuration process step by step
- ▶ Uses simple multiple choice questions wherever possible
- ▶ Uses group settings to avoid the need to repeat common settings throughout the system
- ▶ Provides guidance and explanations throughout the process

Lose the hassle with the Norpass3 Wizard and make more time to get on with something else.

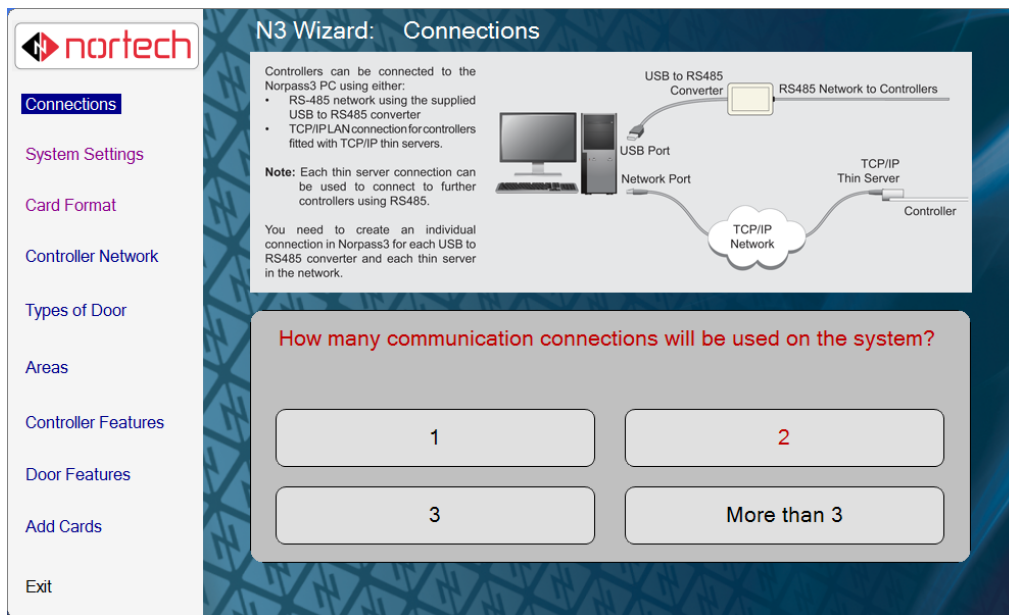

N3 Wizard: Connections

Controllers can be connected to the Norpass3 PC using either:

- RS-485 network using the supplied USB to RS485 converter
- TCP/IP LAN connection for controllers fitted with TCP/IP thin servers.

Note: Each thin server connection can be used to connect to further controllers using RS485.

You need to create an individual connection in Norpass3 for each USB to RS485 converter and each thin server in the network.

Diagram labels: USB to RS485 Converter, RS485 Network to Controllers, USB Port, Network Port, TCP/IP Network, TCP/IP Thin Server, Controller.

How many communication connections will be used on the system?

Buttons: 1, 2, 3, More than 3